



GET STARTED

DOOR & WINDOW SENSOR GUIDE





SLIDING WINDOW SETUP



DOOR AND WINDOW SENSOR

All of our Door and Window Sensors consist of two parts:


- A** a magnet (smaller piece)
- B** a transmitter (larger piece)

During setup, make sure the arrows are aligned as shown below and no more than a thumb's width apart.

- 1 First, examine your window:** If there are sliding panes, reference the setup image on the left for proper placement.

If your window design is different than the setup shown on the left, you can find alternate setup instructions in the Resource Center at frontpoint.com/help



- 2 Determine where to place the sensor,** remove the wax backing from the adhesive and press firmly for **30 seconds**.

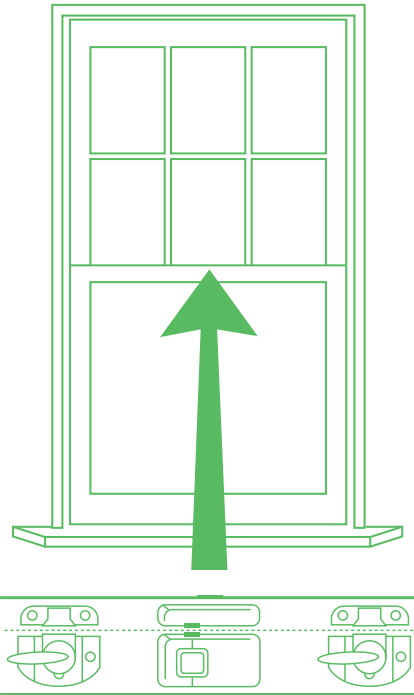

ALTERNATE WINDOW SETUP

If your windows do not have two moving panes, please use the following setup.

Depending on the size of your frame, you could place the transmitter on either the window itself or the frame, with the magnet opposite of it.

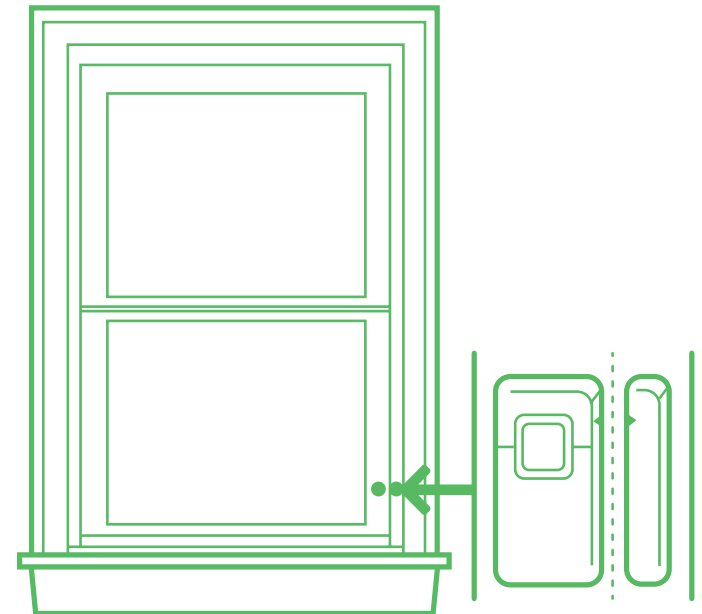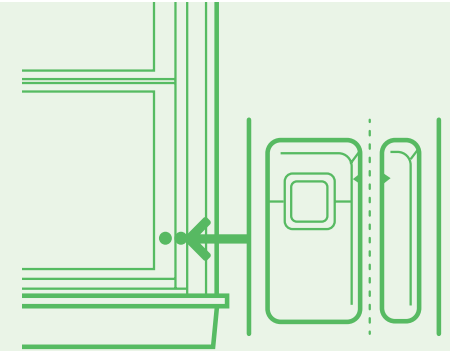

HAVE A QUESTION? VISIT FRONTPOINT.COM/HELP


HAVE A QUESTION? VISIT FRONTPOINT.COM/HELP



STANDARD DOOR SETUP


FIRST, EXAMINE YOUR DOOR:

If the door and the frame are flush when the door is closed, place the *magnet (smaller piece)* on the door and the *transmitter (larger piece)* on the frame. Align it as shown on the **preferred setup** below.

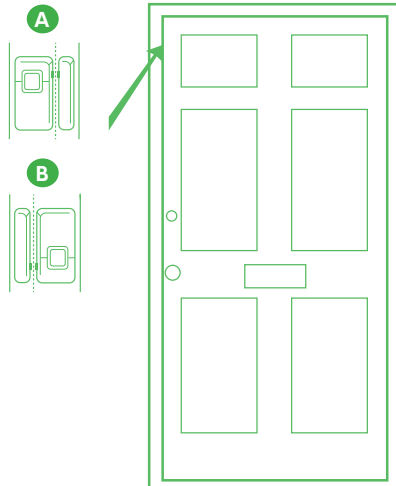


A Preferred Setup

B Optional Setup

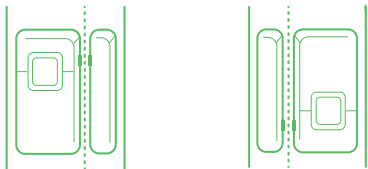

If you have crown molding or any other type of decorative molding, it might be more convenient for you to reverse the setup, with the transmitter on the door and the V magnet on the frame, as shown in the **optional setup**.

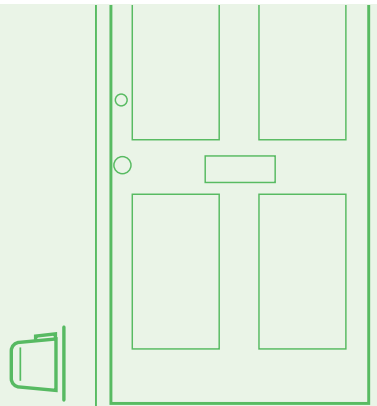

Determine where to place the sensor, remove the wax backing from the adhesive and press firmly for **30 seconds**.


If your door design is different than the setups shown above, you can find alternate setup instructions in the Resource Center at frontpoint.com/help




DOORS WITH MOLDING SETUP

DOORS WITH MOLDING:

Not all doors fit flush with the doorframe. Some have molding or other decorative features that will prevent you from placing your sensor in a flush, even position.

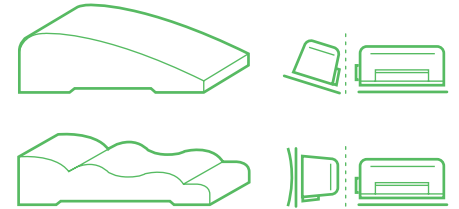

In these situations, you may need to *mount the magnet angled* toward the transmitter, as displayed in all examples.

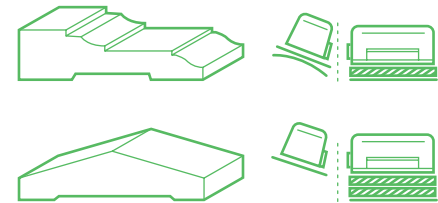


In other cases, you may need to add additional adhesive *beneath the transmitter to properly align* the transmitter and magnet, as displayed in the bottom two examples below.

? For additional adhesive, call Customer Support


TWO IMPORTANT PLACEMENT ASPECTS TO KEEP IN MIND:

- 1 Ensure the arrows are less than a thumb's width apart from each other.
- 2 Place the magnet so the door does not make contact with it and knock it off when opened.

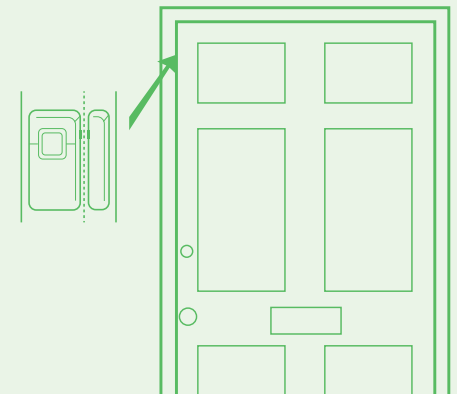





SLIDING DOOR SETUP

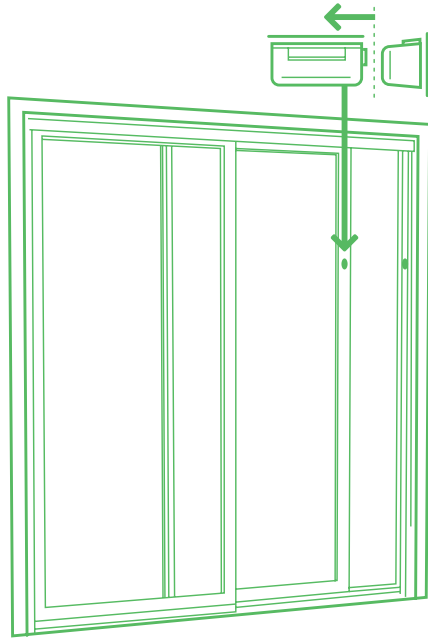


For sliding glass doors that do not align flush with their frame, place the transmitter on the door and place the magnet on the inside of the frame at a *90-degree angle* to the transmitter.

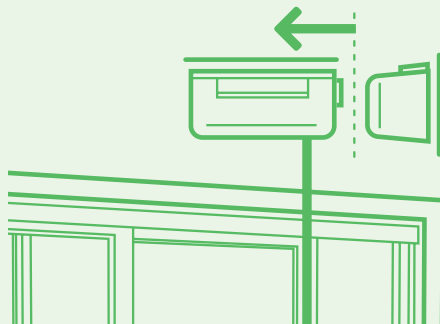

DOUBLE DOOR SETUP

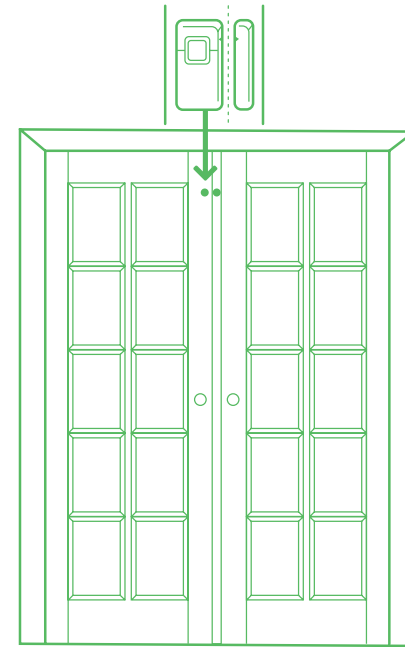

If you have double doors, you can use one sensor to protect both doors. Place the transmitter on one of the doors and the magnet on the other, near the top. Double check to make sure that the indicator arrows are aligned.

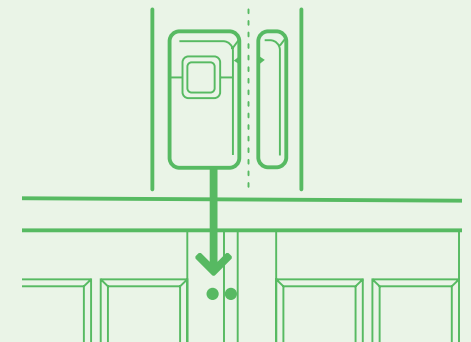



HAVE A QUESTION? VISIT [FRONTPOINT.COM/HELP](https://www.frontpoint.com/help)